

# RB 16-75 Roller Blind Jumbo Cassette Ultra Motorized System®

### **Technical Document**



www.sedarglobal.com

### **About this Document**

This document is a detailed technical resource for **the RB 16-75 Roller Blind Jumbo Cassette Ultra Motorized Rail System**®, offering in-depth specifications to aid engineers, installers, and architects in understanding the product's technical intricacies.

To access additional system documents, please click on the links provided below or scan the accompanying QR code for immediate redirection to the relevant document.







**Roller Blinds Fabric Specifications** 

For inquiries about the RB 16-75 Roller Blind Jumbo Cassette Ultra Motorized System® or to utilize our Projects Department's bespoke services, please contact us using the QR code below for guidance in transforming your spaces with innovation and style. Our team is ready to assist with product details, installation, and custom solutions, ensuring your design needs are expertly met.



Email: <u>projects@sedarglobal.com</u>
Projects Hotline: <u>+971502313453</u>

## **Table Of Contents**

About this Document ————————————————————————————————————	02
System Description ————————————————————————————————————	04
System Limitations ————————————————————————————————————	04
System Drawing ————————————————————————————————————	05
System Profile Drawings ————————————————————————————————————	06
Measurement Diagram ————————————————————————————————————	09
Measurement Instructions ————————————————————————————————————	10
Fitting Techniques ————————————————————————————————————	13
Installation Instructions ————————————————————————————————————	14
Operation/Control	20
Side Channel Options	21
Valance ————————————————————————————————————	23
Jumbo Cassette Ultra	23
Double Bracket ————————————————————————————————————	24
Motorization ————————————————————————————————————	25
General Safety Instructions	27
Other Relevant Documents	28
Projects and Professionals Contact Information ———	28

# **System Description**

The Sedar RB 16-75 Roller Blind Jumbo Cassette Ultra Motorized Rail System® is a versatile solution for residential, commercial, and large venues. The system incorporates a 50 mm pipe with a jumbo cassette ultra that shields the mechanism from dust and damage, reducing maintenance, and extending system life. This system is remote controlled and automation compatible powered by Somfy Sonesse® 50 that allows for wireless radio control of motorized window covering.

This system has a vast selection of fabric choices, offering custom-printed blinds for a personal touch. It is easy to install and compatible with substrates such as concrete, wood, reinforced gypsum, and metal.

This product comes with the following warranties:

Products	Warranties
Sunscreen Fabric	10 years
Blackout Fabric	1 year
Non-Blackout Fabric	1 year
Motor and System	5 years

# **System Limitations**


Description	Value
Tube	50 mm
Minimum Width	80 cm
Maximum Width	260 cm
Minimum Height	20 cm
Maximum Height	500 cm

Note: Larger dimensions are allowed through Ultrasonic Welding.

# **System Drawing**

**System:** 16-75 Roller Blind Jumbo Cassette Ultra Motorized System


**Operation:** Remote Controlled and Automation Compatible

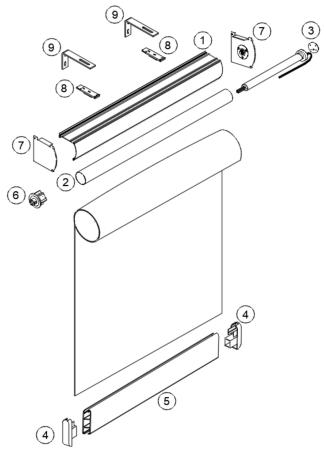


Part No.	Description
1	16-75 Jumbo Ultra Cassette
2	50mm Tube - Aluminum
3	Somfy Sonesse® 50 Motor
4	Bottom Rail End Cap - White
5	Powder Coated Bottom Rail - White
6	End Plug - White
7	Cassette Cover System One Set (2 pcs)
8	Ceiling Brackets
9	L Clip Brackets

<sup>\*</sup>Note: Contact your system integrator for automation system.

# **Profile Drawings**

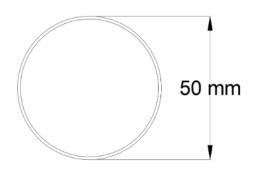

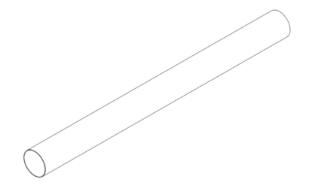


Tube size (50 mm)

Material: Aluminum

Aluminum Grade: 6063 - T6

Thickness: 1.5 mm

**Perspective** 

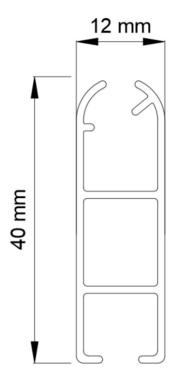


#### **Light Bottom Rail (Standard)**

Material: Aluminum

Aluminum Grade: 6063 - T6

	Color	
Cream	Gray	White

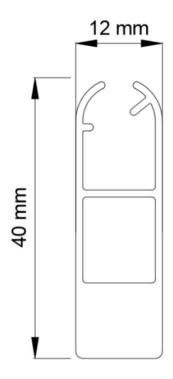


#### **Heavy Bottom Rail (For Request)**

Material: Aluminum

Aluminum Grade: 6063 - T6

	Color	
Cream	Gray	White
		$\bigcirc$

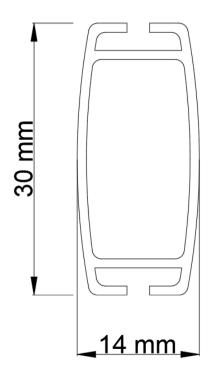


#### **Covered Bottom Rail (For Request)**

Material: Aluminum

Aluminum Grade: 6063 - T6

*Note:* This bottom rail is wrapped with the same fabric material as the blind.

Color						
Cream	Gray	White				
		$\bigcirc$				

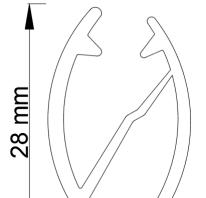


12 mm

#### Elite Bottom Rail (For Request)

Material: Aluminum


Aluminum Grade: 6063 - T6

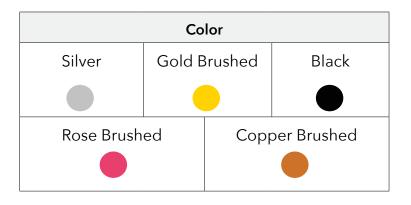



Elite Bottom Rail with their Colors (For Request)

# **Measurement Diagram**

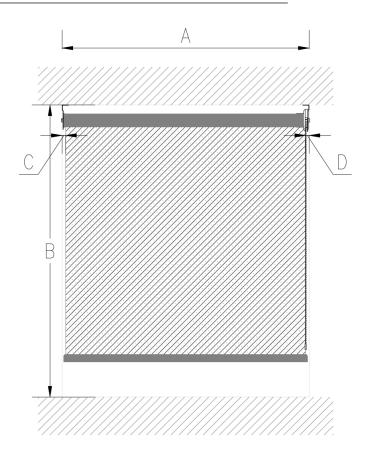

**A-** System width. If the roller is mounted inside the window frame, reduce the width by 1 cm. For outdoor mounting, we recommend adding 10 cm on each side.


- **B-** System height
- C- Light gap on left side 25 mm
- ${f D} ext{-}$  Light gap on right side 25 mm

### **Measurement Instructions**

#### **Tools Needed**



1.Measuring tape (metal)



2. Pencil and notepad




3. Step ladder

#### **Inside Mount Roller Blinds Measurement Instructions**


#### Step 1:

Measure the top, middle, and bottom then record the narrowest.

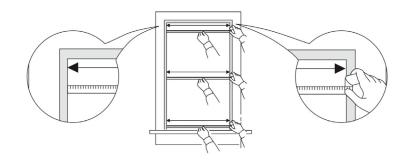


#### Step 2:

Measure the left center and right then record the longest height.

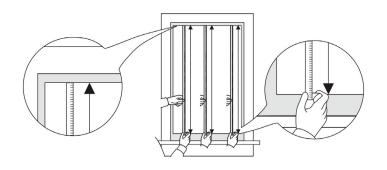

#### Step 3:


Measure and record the depth of the window.



#### Things to consider

#### **Considerations for Valance:**

- Valance measurement should equal the window width.
- Expect gaps (2.5 cm) on the sides.
- Pay attention to door knobs and handles. If they are present, think about opting for an outside mount.
- Note that with the cassette, the blind cannot roll outwards, only inside rolling is possible.
- Minimum depth required for valance is 10 cm.

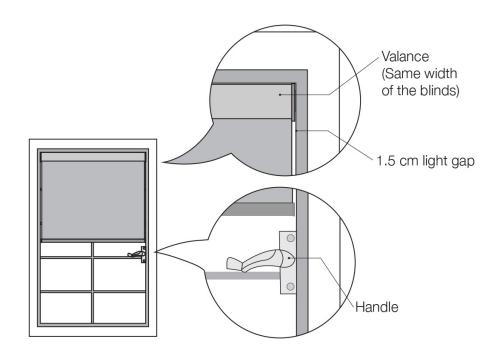


#### **Outside Mount Roller Blinds Measurement Instructions**

#### Step 1:

Measure the middle width of the window.


#### Step 2:

Add 7.5 cm - 15 cm to each side to minimize light penetration.

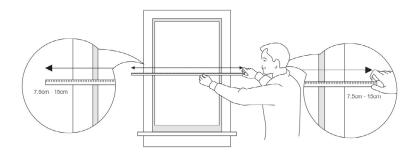


#### Step 3:

Measure the height from the middle of the window. The height will depend on your measurement.

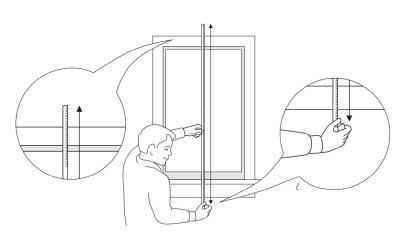


#### **Considerations for Valance:**

- Cornice and valance measurements will be automatically manufactured 1.5 cm wider than the blinds.
- Maintain a minimum of 15 cm above the window for installation.

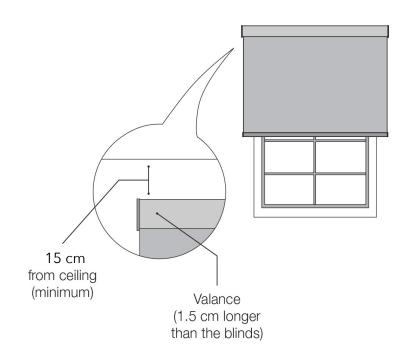


# Fitting Techniques

Note: 75 mm clear surface area is required for installation and a drop of 68 mm.

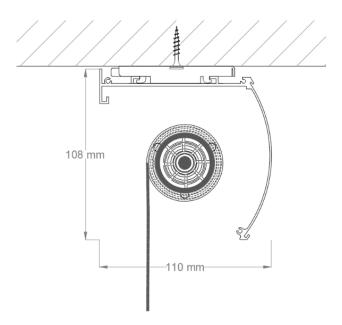

**Ceiling Mount** 

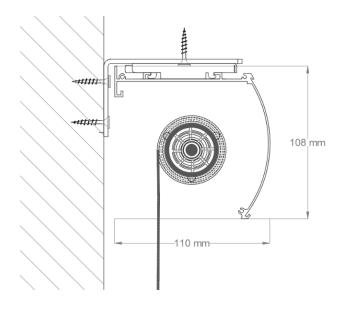

**Wall Mount** 

### Installation Instructions

#### Tools needed















- 1. Measuring tape (metal)
- 2. Pencil (for marking)
- 3. Work gloves

- 4. Drill Machine
- 5. Drill Bit

- 6. Screws
- 7. Wall Plug (Wall Anchor)


The requirement for each type of installation to provide strength and corrosion resistance in various types of installation surface applications:

- 1. Aluminum Stainless steel self-drilling screws.
- 2. Concrete 6 mm screws and plugs are required for installation.
- 3. Gypsum Special butterfly screws and plugs are required for installation.

#### **Installation Steps (Inside Mount):**


#### Step 1:

Measure the wall or ceiling for the first bracket position 30 cm from the edge.

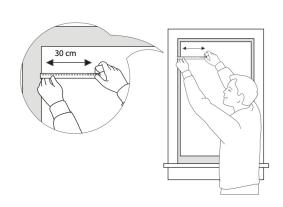


#### Step 2:

Mark the position of the first bracket 5cm depth.

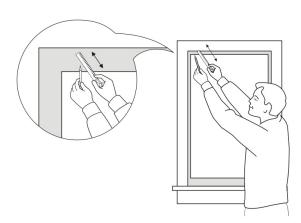


#### Step 3:

Fix the first bracket using a drill or screwdriver.

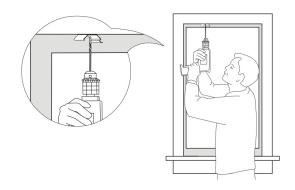


#### Step 4:

Measure the wall for the second bracket. Make sure the position is exactly aligned to the first bracket.

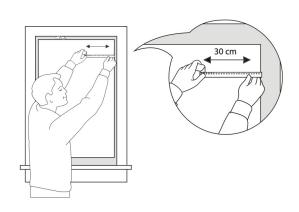


#### Step 5:

Mark the second bracket.

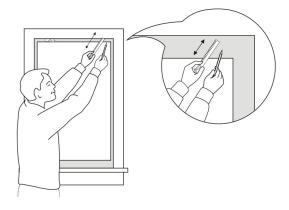

#### Step 6:

Fix the second bracket using a drill or screwdriver.

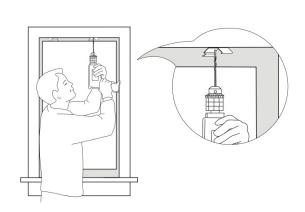

#### Step 7:

Fix the roller shades on one side.

#### Step 8:


Fix the roller shade on the other side.


#### Step 9:

Test if the roller shades is installed properly. Do not exert too much pressure.


#### **Step 10:**

Check if it's working correctly using the Somfy remote control.

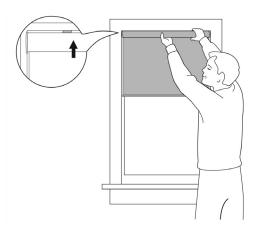

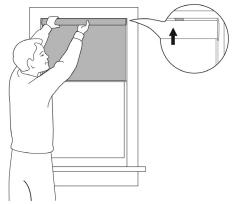



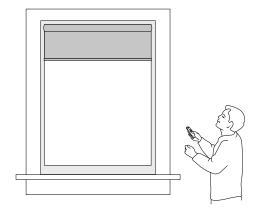

#### **Installation Steps (Outside Mount):**


#### Step 1:

Measure the wall or ceiling for the first bracket position 30 cm from the edge.




#### Step 2:

Mark the position of the first bracket.

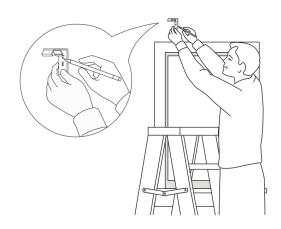

#### Step 3:

Fix the first bracket using a drill or screwdriver.

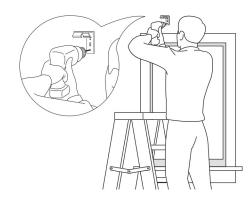

#### Step 4:

Measure the wall for the second bracket. Make sure the position is exactly aligned to the first bracket.



#### Step 5:

Mark the second bracket.

#### Step 6:


Fix the second bracket using a drill or screwdriver.


#### Step 7:


Fix the roller shade on one side.


#### Step 8:

Fix the roller shade on other side.

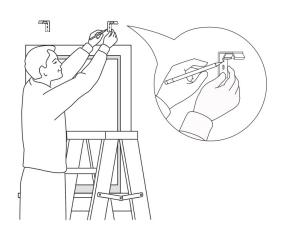

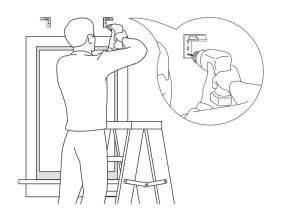

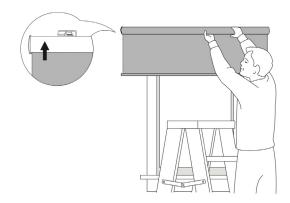

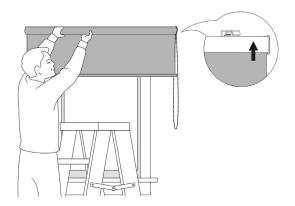


#### Step 9:

Test if the roller shades is installed properly. Do not exert too much pressure.



#### **Step 10:**

Check if it is working correctly using the Somfy remote control.

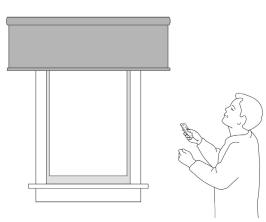

#### Tips

• Alignment of brackets should be exact to avoid damaging the product.


# **Operation/Control**

#### Raising or Lowering:

Step 1: Press the 'down' button on your Somfy remote control to close the blind.

Step 2: Press the 'up' button on your Somfy remote control to open the blind.

You can press the "My" buttons on your Somfy remote

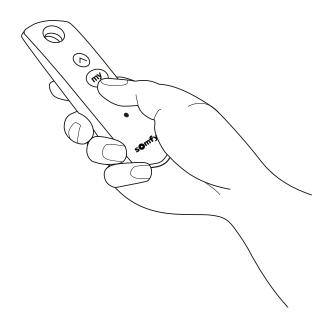

# **Product Maintenance and Cleaning**

- Regularly dust with a feather duster or soft cloth.
- For thorough dust removal, use a hand-held vacuum with low suction.
- CAUTION: Avoid harsh detergents.

# **Side Channel Option**

A side channel is a vertical guide installed on either side of a window to slot the edges of the blind fabric, enhancing functionality and aesthetics.

The set includes an aluminum cassette, side channel profiles, and a bottom bar in standard white, cream, or beige finishes.

The fabric edges are secured with a dual brush insert, and operation is through a stainless steel ball chain.


#### Single Side Channel


Material: Aluminum


Aluminum Grade: 6063 - T6


Thickness: 1.5 mm


Color				
Cream	Gray			
White	Mill Finish			

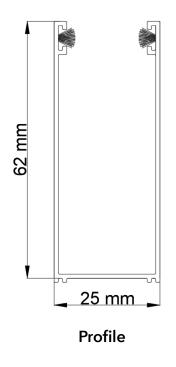


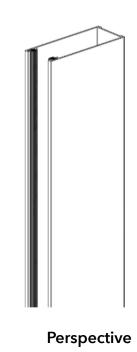

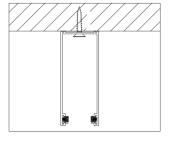

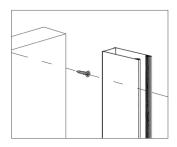

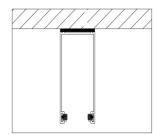

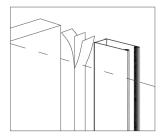

Screw mounting technique

Double-sided tape mounting technique


#### **Double Side Channel**


Material: Aluminum

Aluminum Grade: 6063 - T6


Thickness: 1.5 mm

	Color	
Mill Finish	Gray	White

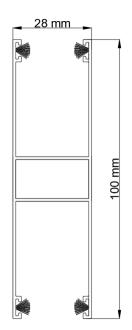

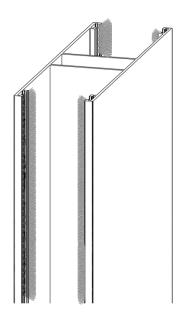

Secure two or more sequential roller blinds on aluminum surfaces for light-blocking purposes and enhanced aesthetics, utilizing either double-sided tape or adhesive.

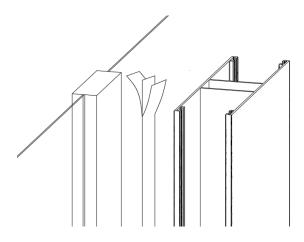

Installing on aluminum using double sided tape

### **Valance**


A valance improves roller blinds by concealing the top pipe and hardware. It shields the mechanism from dust and damage, reducing maintenance and extending system life.

#### **Jumbo Cassette Ultra**


Colors: Covered by the blind fabric selection.

Material: Aluminum


Aluminum Grade: 6063 - T6

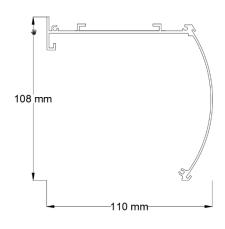


**Profile** 

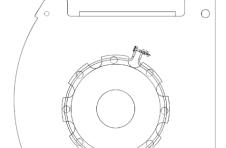

**Bracket Cover Left Side** 

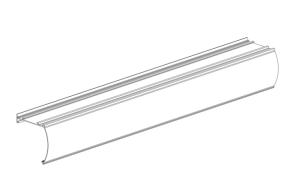

Perspective

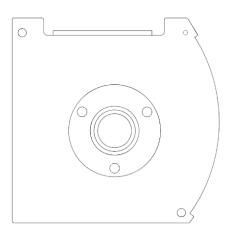

**Bracket Cover Right Side** 

### **Double Bracket**

The RB 16-75 Roller Blind Jumbo Cassette Ultra Motorized Rail System® doesn't have the double bracket feature. Use the QR code or the link below to see our product options that offer the double bracket feature.



RB 16-11 Roller Blind Manual System 40





RB 16-12 Roller Blind Manual System 45

### Motorization

The **RB 16-75 Roller Blind Jumbo Cassette Ultra Motorized Rail System**® is powered by Somfy Sonesse® 50.

The Somfy Sonesse® 50 RTS is a motor designed for interior window coverings, known for its quiet operation and ease of use. The system supports Radio Technology Somfy (RTS), an exclusive remote control protocol used to operate and control wirelessly.

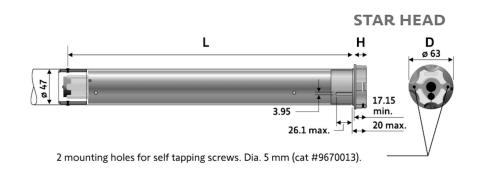

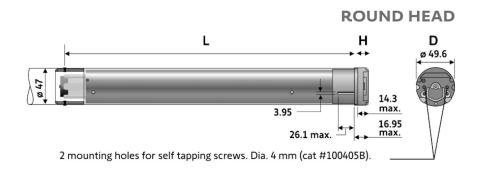

#### **Performances**

Nominal Voltage		230 V	/50 Hz		120 V /	60 Hz	Hz 220 V / 60 Hz		
Torque (Nm)	6	6	10	15	6	10	5	10	
Speed (rpm)	17	28	28	17	32	32	32	32	
Sound Level (dBa)	41	45	45	48	45	47	46	47	
End-limit Unit Versions Available	RA	RA, PA	RA, PA	RA	RA, RARH, PA, PS	RA, RARH, PA, PS	RA, PA	RA, PA	

#### **Dimensions**

L (mm)	553	603	603	603	603	602	603	603
Head Thickness (H)	16.95 mm - 20 mm							
Head Diameter (D)	63 mm - 49.6 mm							
Tubu min (int)	47 mm							

### **Technical Data**

Voltage Supply	AC			
Index Protecting Rating	IP 44			
Limit Switch Unit	Rapid & Progressive			
Limit Switch Capacity	250 Turns			
Temperature Working Range	- 20°C to 60°C			
Insulation Class	Class I			

For more information, you can visit: <a href="https://www.somfy.com/en-en/">https://www.somfy.com/en-en/</a>

# **General Safety Instructions**

#### Ensure adults adhere to these safety guidelines provided by Sedar:

- If the blind is not raised or lowered evenly, it can become damaged.
- If the fabric is not level as it rolls, it may wrap around the tube incorrectly, leading to wrinkles and could tear over time.
- Never immerse the motor in liquid.
- Never drill holes in the motor.
- Do not drop the motor and avoid impacts.
- Follow safety standards during product installation and maintenance.

### Other Relevant Documents

To further explore the RB 16-75 Roller Blind Jumbo Cassette Ultra Motorized Rail System®, please click the links below or scan the QR codes. These will direct you to our System Brochure and Technical Summary, offering in-depth information and visual guides to assist in your project planning.







**Roller Blinds Fabric Specifications** 

# **Projects and Professionals Contact Information**

For inquiries about **the RB 16-75 Roller Blind Jumbo Cassette Ultra Motorized Rail System®** or to utilize our Projects Department's bespoke services, please contact us. Our team is ready to assist with product details, installation, and custom solutions, ensuring your design needs are expertly met. Contact us using the QR code below for guidance in transforming your spaces with innovation and style.



Email: <u>projects@sedarglobal.com</u>
Projects Hotline: +971502313453